


## BATH FRONT AND END PANEL FIXING INSTRUCTIONS

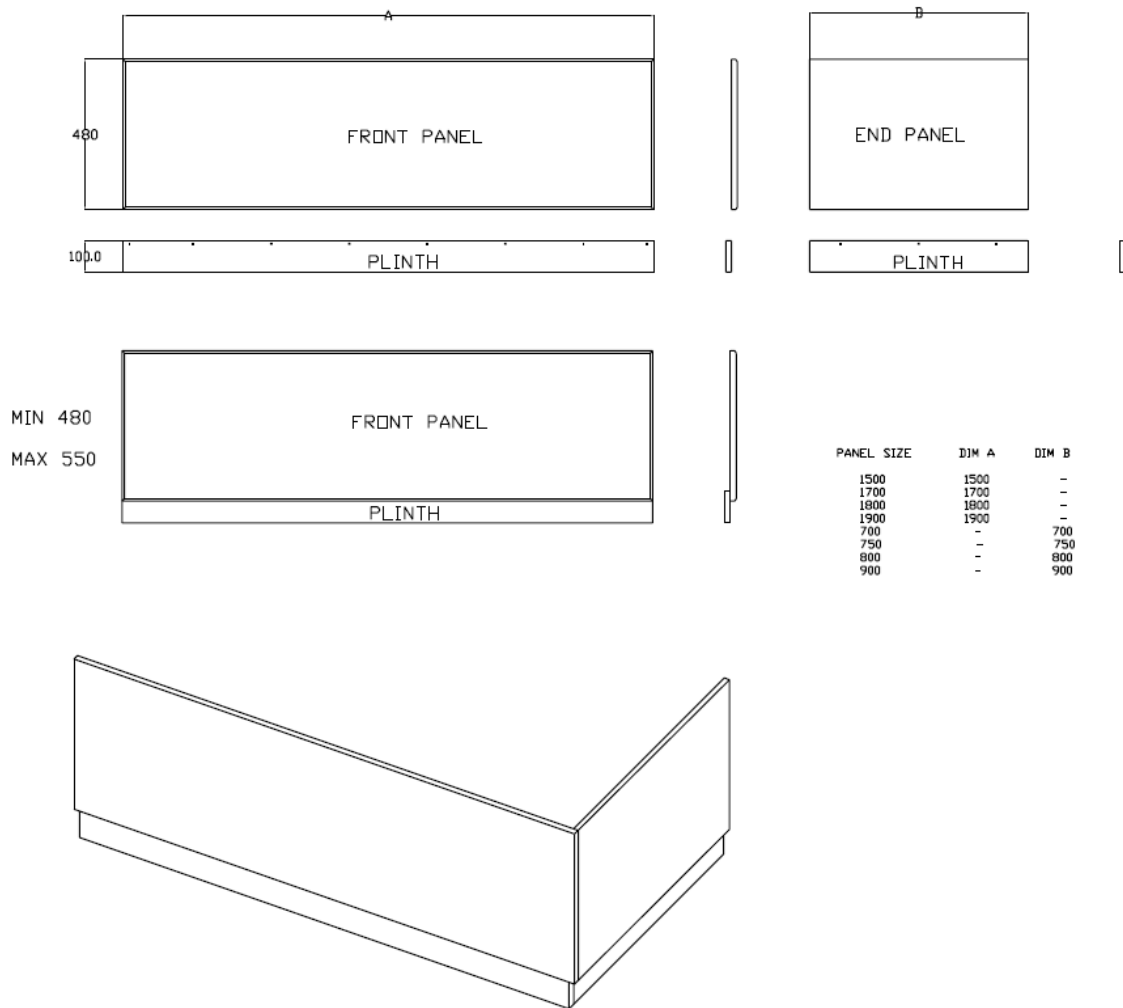

- MEASURE THE HEIGHT THAT THE PANEL NEEDS TO BE BY MEASURING FROM UNDER THE BATH RIM TO THE FLOOR.
- DRILL EQUALLY SPACED HOLES ALONG THE PLINTH AND SCREW TO THE BOTTOM OF THE MAIN PANEL AT THE DESIRED HEIGHT USING THE SCREWS PROVIDED.
- IT IS ADVISABLE TO BUILD A FRAME OR PLACE BATTENS ALONG THE FLOOR AND DOWN THE WALL SIDES TO SUPPORT THE PANEL.
- WHEN AN END PANEL IS USED IT IS NECESSARY TO TRIM THE PLINTHS SO THAT THE FRONT AND END PANELS CAN BUTT TOGETHER. ANY TRIMMING SHOULD BE DONE AT THE WALL ENDS TO ENSURE THAT THE FINISHED EDGE IS AT THE VISIBLE CORNERS.
- FRONT AND END PANELS ARE FASTENED TOGETHER USING THE SCREWS AND CORNER BRACKETS PROVIDED.
- ANY CUT OR TRIMMED EDGES MUST BE SEALED AGAINST WATER INGRESS.